

Quick Setup Guide Self-Propelled Mower Model BBRR219BS

Questions?

Do not return to the store. We can help. Call Customer Service Toll-Free 1-877-370-7504 Or visit our website www.badbovmowers.com

A WARNING AVOID SERIOUS INJURY OR DEATH Read operator's manual. Keep safety devices (guards, shields, switches, etc.) in place and working. Go across slopes, not up or down. Remove objects that could be thrown by blade. Do not mow when children or others are aroun. Look down and behind before and while moving backwards. • Wait at least 2 minutes before refueling. **A** DANGER **AMPUTATION AND THROWN**

OBJECT HAZARD

or entire grass catcher is in its proper place.

Keep hands and feet away from deck. Do not operate mower unless discharge chute or entire grass catcher is in its proper place.

BBRR219BS Overview

Bail Control

Recoil Rope

Handle

Cutting Height

Adjust Lever

Side Discharge

Cover

Wheel Drive

Control

Oil Fill and

Dipstick

Fuel Fill

Cap

Remove all packing materials from the mower. Locate and identify the items included with the mower

Cut all four corners of the box from top to bottom.

Carefully read all the manuals supplied with the mower.

Remove the knob, lock washer, and bolt (A, Figure 1)

They contain important safety, operating, and

Unpack the mower

Read the manuals

Unfold the handle

from each side of the handle base.

• Loosen, but do not remove, the knobs (B) on the

Raise the handle to the operating position, and

Reinsert the lower handle bolts through the handle base

and handle (C, most users prefer the middle position).

Install the lock washers and fully tighten the knobs.

Set up the recoil rope handle

Hold the bail control against the handle (A, Figure 2).

Pull the recoil rope handle out to the rope guide (B)

on the handle. Hook the recoil rope into the rope

maintenance information.

upper handle.

 
tighten the upper knobs.

quide (it might be a tight fit).

WARNING

Move the mower outside to a flat, level surface.

Add oil and fuel

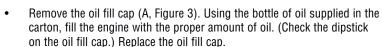

IMPORTANT Mower is shipped without oil in engine. Failure to add oil will result in engine damage.

- Remove the fuel fill cap (B). Following the three-step instructions on the FreshStart[™] card, snap the fuel preserver cartridge into the bottom of the fuel fill cap.
- Add clean, fresh, UNLEADED fuel with a minimum of 87 octane, leaving one inch of space from the top of the tank for fuel expansion. NOTE: Fuel blends containing more than 10% ethanol are not recommended.

IMPORTANT Fuel tank holds less than 1/2 gallon. IMPORTANT DO NOT mix oil with fuel. IMPORTANT DO NOT use E85 fuel.

Replace the fuel fill cap, and wipe up any spills.





Start the mower

- Move the cutting height adjust lever (A, Figure 4) to the desired cutting height.
- Set the mower to mulch, bag, or discharge. (See 3-in-1 instructions below.)
- Hold the bail control (A, Figure 5) against the drive handle.
- Pull the recoil rope handle (B) until the engine starts.
- To engage the drive system, slowly squeeze the wheel drive control lever (C) back toward the handle. Squeezing the lever further back increases
- To stop the engine and blade, release the bail control.




Figure 3

A DANGER uel stabilizer is a hazardous chemical. SWALLOWED, call a physician im 6-di-tert-butylphenol (128-39-2) and phatic petroleum distillate (64742-47-8).

▲ WARNING

Operate this product ONLY outdoors Keep exhaust gas from entering a confined area through windows, doors, ventilation intakes or other opening DO NOT operate this product inside any building or enclosure, even if windows and doors are open.



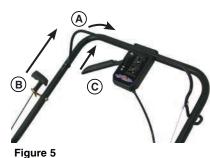

Holding the rear door open, attach the


1 For mulching:

· Leave the side discharge cover and the installed mulch plug in place (Figure 6).

2 To convert to bagging:



 Figure 2

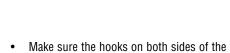

grass catcher to the rear of the mower

(Figure 8).

(Figure 9).

Release the rear door (it will lay on top of the grass catcher).

catcher frame hook onto the rear door rod





3 To convert to side discharge:

- Make sure the mulch plug is installed in the rear of the mower, and the grass catcher is removed.
- Lift the side discharge cover, and install the side discharge deflector onto the mower deck (Figure 10).
- Make sure the upper tabs are hooked behind the cover rod, and the deck tab sticks up through the locking slot (Figure 11).
- Release the side discharge cover (it will lav on top of the grass catcher)





Form No. 7104046 (Rev. '-', 12/10/2009)

Utility Knife Unleaded Fuel (minimum 87 octane)

Items that you will need

Items Included



Side Discharge FreshStart™ Fuel Preserver Cartridge

SAE30W Oil

Operator's

Manual

· Lift the rear door and remove the installed mulch plug (Figure 7).



© Briggs & Stratton Corporation We reserve the right to improve our products and make changes in specifications, designs, and standard equipment without notice and without incurring obligation.